


reStore Stucco Horizontal Reglet Repair

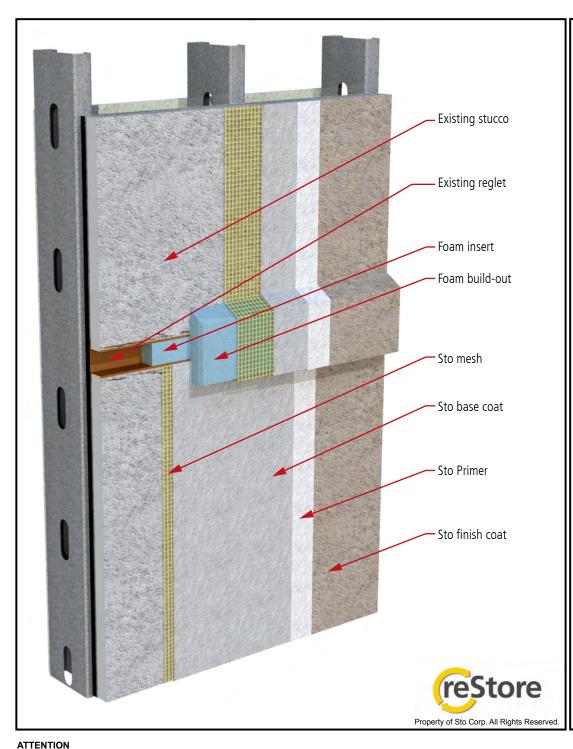

Notes:

1. Clean and prepare surfaces to be repaired to remove all dust, dirt, and other potential bond-inhibiting materials prior to installing Sto materials.

Detail No.: 72.20.71

Date: November 2015

- 2. Repair and/or seal all cracks along existing reglets.
- 3.Apply Sto Base Coat with Sto Mesh or Sto Detail Mesh embedded along the bottom edge of the reglet.
- 4. Install a loose-fit foam insert into the reglet.
- 5. Apply a foam band across the reglet. Secure the foam to the prepared stucco surface above the reglet using Sto TurboStick® adhesive. Do not adhere the foam band to the surface below the reglet. The foam band should extend minimum 2 inches (51 mm) above and 1 inch (25 mm) below the reglet. (For best results, pre-wrap the foam band with base coat and mesh.)
- 6. Slope top edge of foam band away from the wall in accordance with the slope and waterproofing requirements for foam projections for the thickness of the band being used (see Sto Detail 72.20.70).
- 7. Install bond breaker tape and a fillet bead of compatible low modulus sealant along the bottom intersection of the base-coated foam band.
- 8. Apply Sto Primer (if specified) and Sto finish.
- 9. Thermal and normal structural movements create stress along the existing reglets. Some of these stresses may transfer to the foam band and could result in cracking if the band is rigidly attached to the substrate on both sides of the reglet.
- 10. This repair option is primarily for weatherproofing and aesthetic functions. A qualified design professional or qualified restoration contractor must review and approve this detail for use in the specific project conditions.

IMPORTANT: Components not identified as Sto are furnished by other manufacturers and are not necessarily installed by trades who install the Sto products. Refer to project specific contract documents.

www.stocorp.com

Sto products are intended for use by qualified professional contractors, not consumers, as a component of a larger construction assembly as specified by a qualified design professional, general contractor or builder. They should be installed in accordance with those specifications and Sto's instructions. Sto Corp. disclaims all, and assumes no, liability for on-site inspections, for its products applied improperly, or by unqualified persons or entities, or as part of an improperly designed or constructed building, for the nonperformance of adjacent building components or assemblies, of for other construction activities beyond Sto's control. Improper use of Sto products or use as part of an improperly designed or constructed larger assembly or building may result in serious damage to Sto products, and to the structure of the building or its

STO CORP. DISCLAIMS ALL WARRANTIES EXPRESSED OR IMPLIED EXCEPT FOR EXPLICIT LIMITED WRITTEN WARRANTIES ISSUED TO AND ACCEPTED BY BUILDING OWNERS IN ACCORDANCE WITH STO'S WARRANTY PROGRAMS WHICH ARE SUBJECT TO CHANGE FROM TIME TO TIME. For the fullest, most current information on proper application, clean-up, mixing and other specifications and warranties, cautions and disclaimers, please refer to the Sto Corp. website, www.stocorp.com.